


GET **UN**

CENSORED

# THE WAND

USER GUIDE

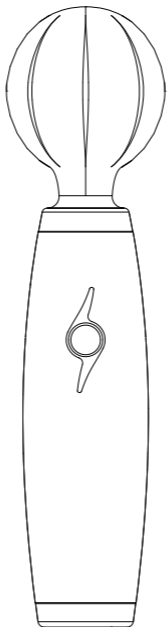

## PACKING LIST

- 1 x Wand Massager
- 1 x USB Charging Cable
- 1 x Instructions
- 1 x Pouch

## TECHNICAL PARAMETERS

Materials: Silicone, ABS

Vibration: Keep pressing to increase vibration

Working Voltage: 3.7V

Waterproof: IPX6

Noise: Decibel<60dB

Battery Capacity: 1000mAh

Duration: >60 minutes (fully charged)

## BUTTONS



1. Press quickly 3 times to turn on/off.
2. Keep pressing to increase vibration.
3. Short press to pause or resume vibration.  
The device will turn off in the pause state and without operation for 10 seconds.

## **BEFORE USE**


1. Charge fully: Plug the USB charging cable into the charge port and connect the other end to a computer or USB charger. The indicator light will blink regularly while charging and will stay lit when fully charged.
2. Clean: Rinse with warm water or mild detergent, dry with a towel.
3. Lubricate the product for a more pleasurable experience.

## **AFTER USE**

1. Rinse with warm water and sterilized soap, dry with a towel.
2. Avoid direct sunlight.
3. Keep out of reach of children.

## **HEALTH AND SAFETY PRECAUTIONS**

- Do not charge near water.
- Do not charge if the USB cord appears damaged.
- Do not use other USB cords with your product.
- Do not put the product in the dishwasher or microwave.
- This product is sold as a novelty only. It is not intended for medical applications or any use that has an adverse effect on any function of the body.
- To avoid injury or aggravation of pre-existing physical conditions, this device should not be used on swollen or inflamed areas of skin.
- Wash before and after use. Do not share with other sexual partners.
- Never let children play with this product.
- In case of pregnancy, diabetes or illness, consult your physician before use.
- Do not use if the silicone appears broken or damaged.
- Only use a water-based lubricant with this product.

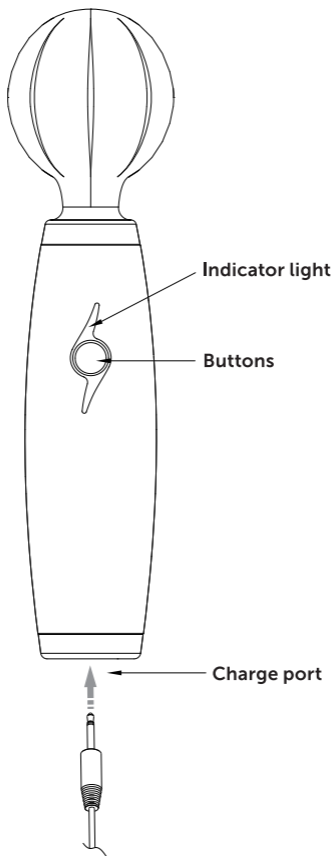

MADE IN CHINA