

THE SUCKER

USER GUIDE



PACKING LIST

- 1 x Wand Massager
- 1 x USB Charging Cable
- 1 x Instructions
- 1 x Pouch

TECHNICAL PARAMETERS

Materials: Silicone, ABS

Vibration: 6 types, 3 intensities

Sucking Modes: 3 types

Working Voltage: 3.7V

Power Supply: 850mAh Waterproof: IPX6

Noise: Decibel<60dB

Duration: >60 minutes (fully charged)

BUTTONS



Press and hold for 2 seconds to turn on/off.



Press to switch modes.



Press to increase strength.



Press to reduce strength.



1. Single press to switch sucking modes.

2. Press 2 seconds to turn on/off sucking function.

BEFORE USE

- Charge fully: Plug the USB charging cable into the charge port and connect the other end to a computer or USB charger. The indicator light will blink regularly while charging and will stay lit when fully charged.
- 2. Clean: Rinse with warm water or mild detergent, dry with a towel.
- 3. Lubricate the product for a more pleasurable experience.

AFTER USE

- 1. Rinse with warm water and sterilized soap, dry with a towel.
- 2. Avoid direct sunlight.
- 3. Keep out of reach of children.

HEALTH AND SAFETY PRECAUTIONS

- Do not charge near water.
- Do not charge if the USB cord appears damaged.
- · Do not use other USB cords with your product.
- Do not put the product in the dishwasher or microwave.
- This product is sold as a novelty only. It is not intended for medical applications or any use that has an adverse effect on any function of the body.
- To avoid injury or aggravation of pre-existing physical conditions, this device should not be used on swollen or inflamed areas of skin
- Wash before and after use. Do not share with other sexual partners.
- Never let children play with this product.
- In case of pregnancy, diabetes or illness, consult your physician before use.
- Do not use if the silicone appears broken or damaged.
- · Only use a water-based lubricant with this product.

